℄ = RECOMMENDED SETTING LINE

INTERFACE FAMILY

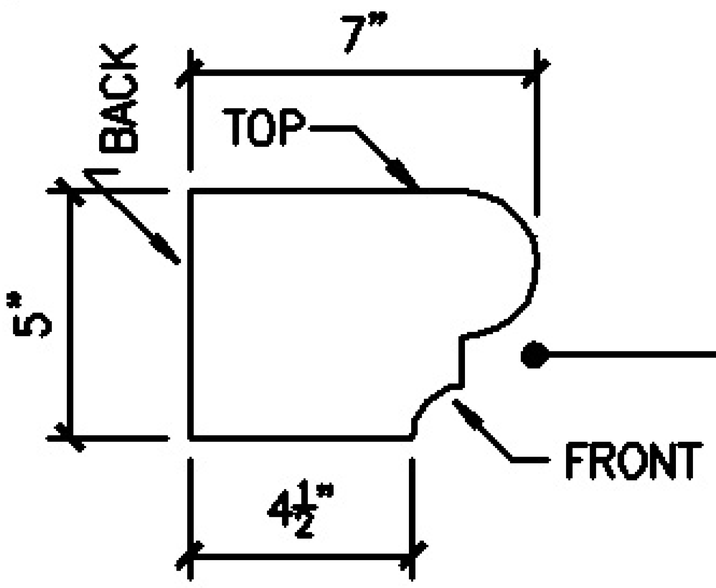

BOLSON1
PROFILE

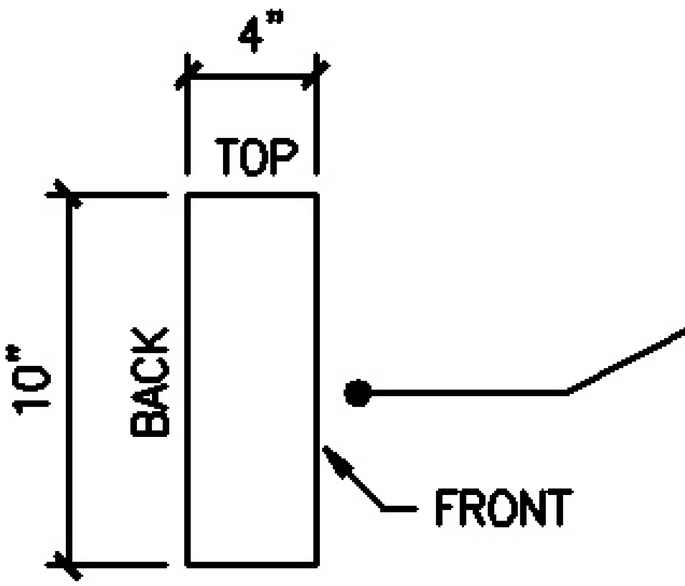

FLATFACE1A
PROFILE

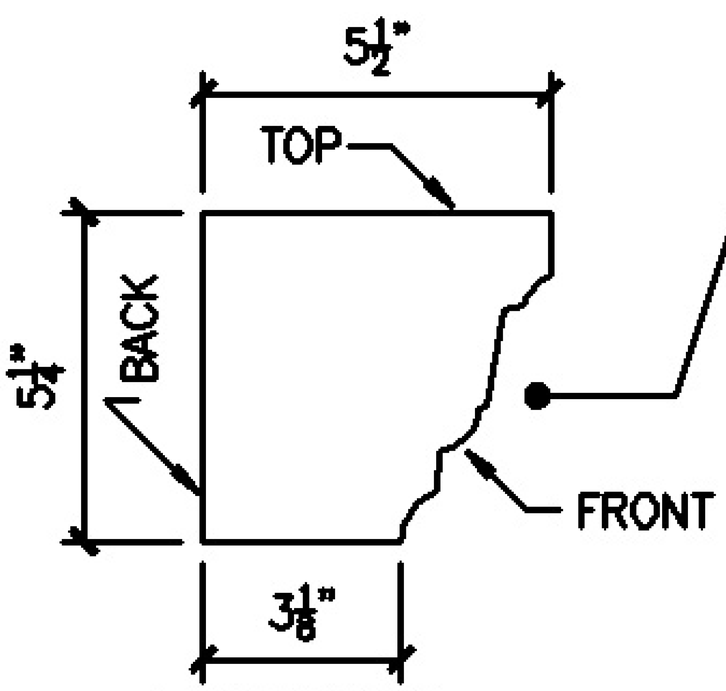

JAMISON2
PROFILE

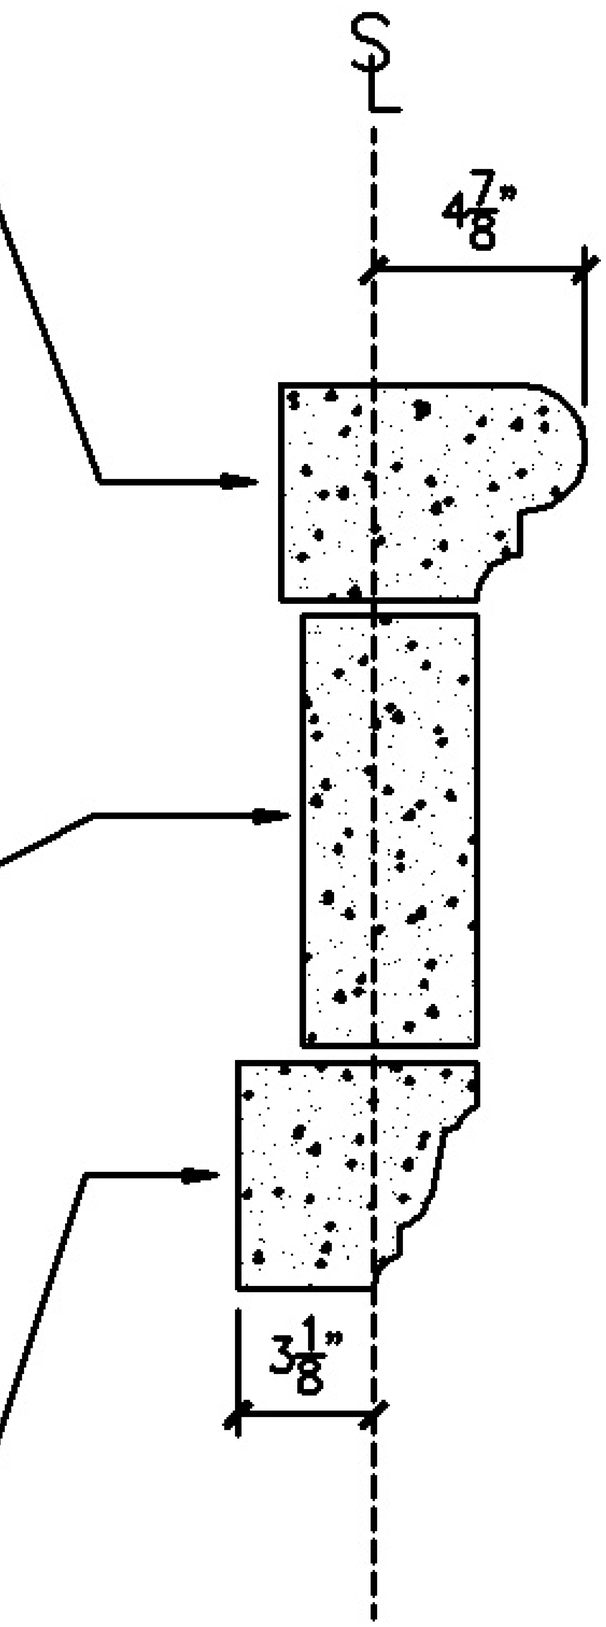

① VERTICAL SECTION

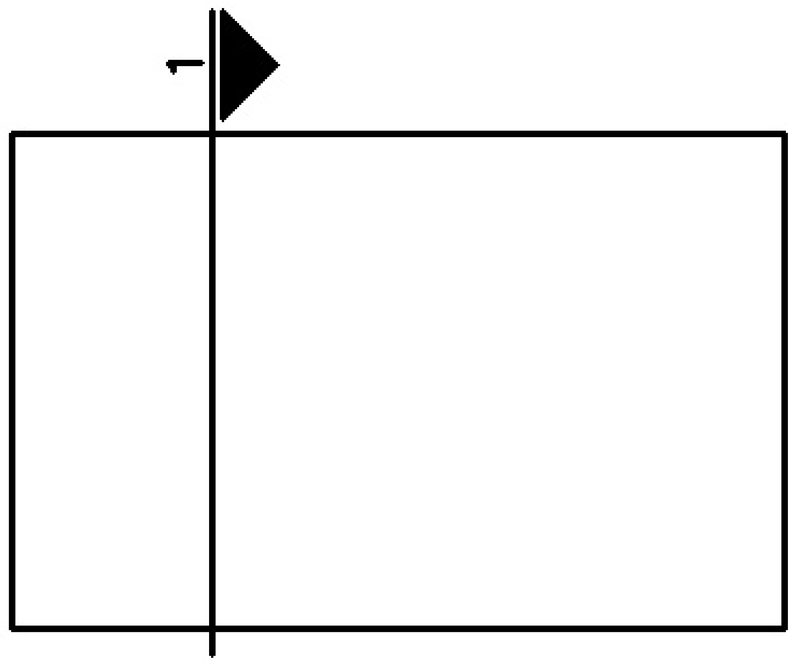

EXAMPLE PHOTO OF ENTABLATURE

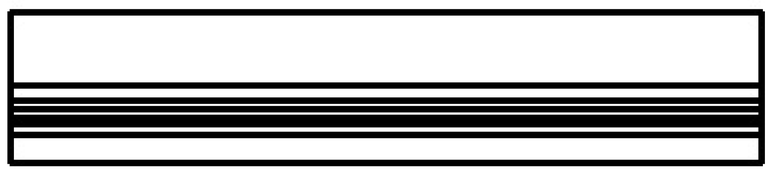

② TOP VIEW

℄ = THE EXTERIOR SURFACE OF A WALL.

THE **SETTING LINE** IS USED AS A GUIDE TO INSTALL YOUR STONE CORRECTLY. THE EASY THING ABOUT THE **SETTING LINE** IS THAT YOU CAN MOVE THE **SETTING LINE** IN AND OUT TO A MAX. & MIN.

THE USE OF MIN. IS TO LET YOU KNOW "HEY ANY FURTHER OUT AND THE STONE WILL FALL OFF THE EXTERIOR WALL." THE USE OF THE MAX. IS TO LET YOU KNOW "HEY ANY FURTHER BACK AND THE STONE WITH BE A RECESS IN THE EXTERIOR WALL."