

# Installation & Attachments

The following shows a variety of installation situations and examples of the types of hardware required for installing architectural stone.




Left, a fireplace leg using strap anchors and tapcon screws.



Left and above, securing a circletop surround with soffit using strap anchors and tapcon screws.




Above, securing a circletop surround using strap anchors and tapcon screws.

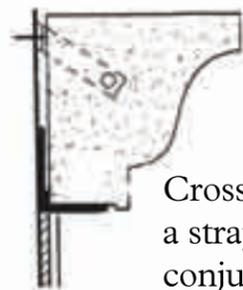

Cross section shows a strap anchor in conjunction with a steel lintel.



Strap anchors can be used in many installation situations.

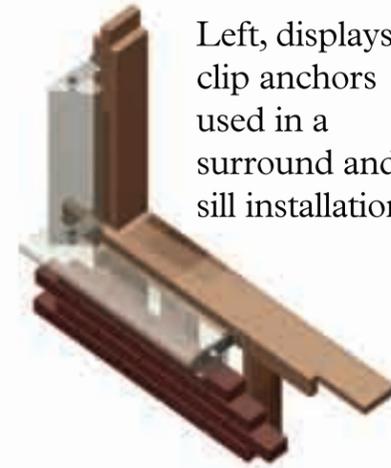

Left, displays clip anchors used in a surround and sill installation.



Clip anchors are often used for installations involving larger stones.

Below, this entry uses clip anchors and strap anchors for additional support.



Left and above, an excellent example of clip anchors and steel lintels used in a surround installation.

