



# Attachments & Interface Balustrade

## Drill & Pin Balustrades

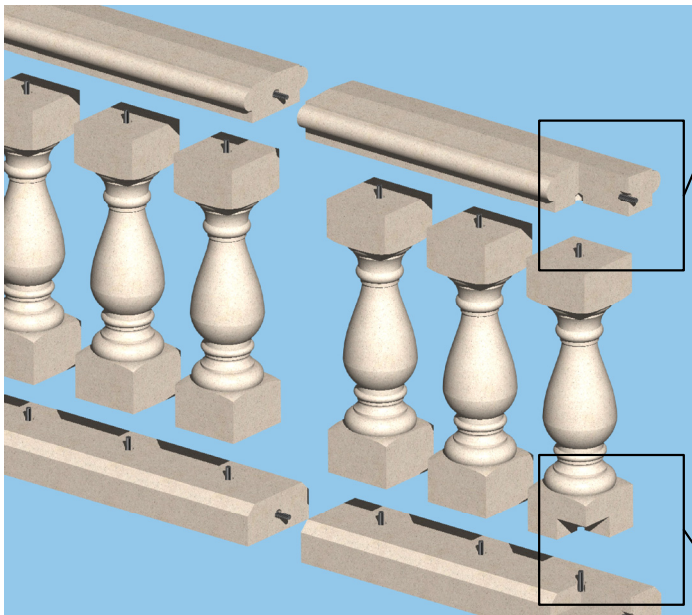


Steel pins are the most commonly used method to assemble Balustrade

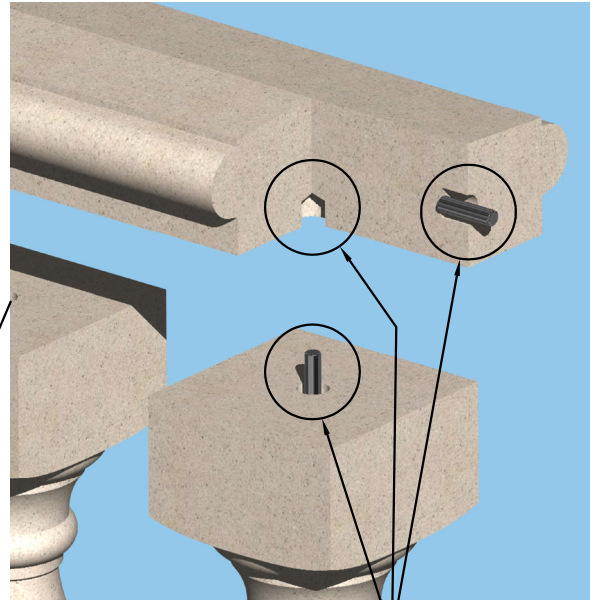

Drill a  $\phi 1"$  x 1.25 deep hole into both stones. Remember to align the stone and holes properly before drilling the holes.

Use a  $\phi \frac{1}{2}"$  x 2" long steel pin to secure the stones.

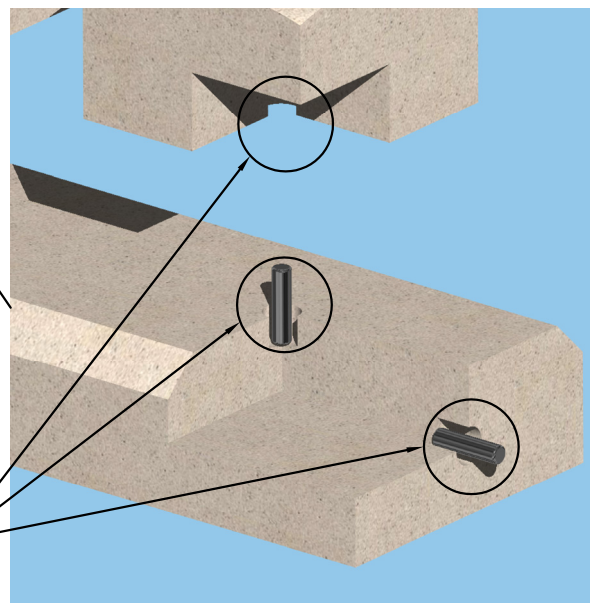

Drill a  $\phi 1"$  x 1.25 deep hole into both stones. Remember to align the stone and holes properly before drilling the holes.

Use a  $\phi \frac{1}{2}"$  x 2" long steel pin to secure the stones.