
Design Options - Watertable

Wrap your home in beauty with the addition of a watertable



Using copes gives you a more transitional look.

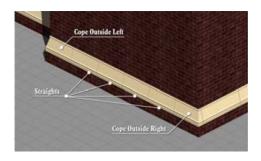

Several examples of a cope outside left, cope outside right, and a straight part.



A mitered corner is another option of connecting your parts together.



This is a close up of what a cope outside left would look like



Here is an example of a backed cope. This allows a smooth end of a profile

